

Zubehör	„Digta 7“-Serie	Digta Station 447 Plus	Digta Soundbox 830	PC
Kopfhörer				
Digta Headphone 565 Jack	•			•
Digta Headphone 565 GBS	o	•	•	
Digta Headphone 565 USB				•
Digta Swingphone 568 Jack	•			•
Digta Swingphone 568 GBS	o	•	•	
Digta Swingphone 568 USB				•
Digta Swingphone 950 Jack	•			•
Digta Earphone 957 Jack	•			•
Digta Earphone 957 GBS	o	•	•	
Digta Earphone 957 USB				•
Fußschalter				
Fußschalter 536 GBS	o	•	o	
Fußschalter 540 USB				•
Dockingstation				
Digta Station	•			•
Digta W/LAN-Adapter	•	•		•
USB Kabel				
USB Mini-Kabel	•			•
Barcode				
Digta Scan 407	•			
Akku				
Akkupack 962	•	•		
Sonstiges				
Digta Card 7	•			•

- kompatibel
- o Anschluss an Dockingstation

