

GRUNDIG


Dh 2210



Steno-Cassette 30





Handdiktiergerät

Portable dictation machine

      Machine à dicter portable

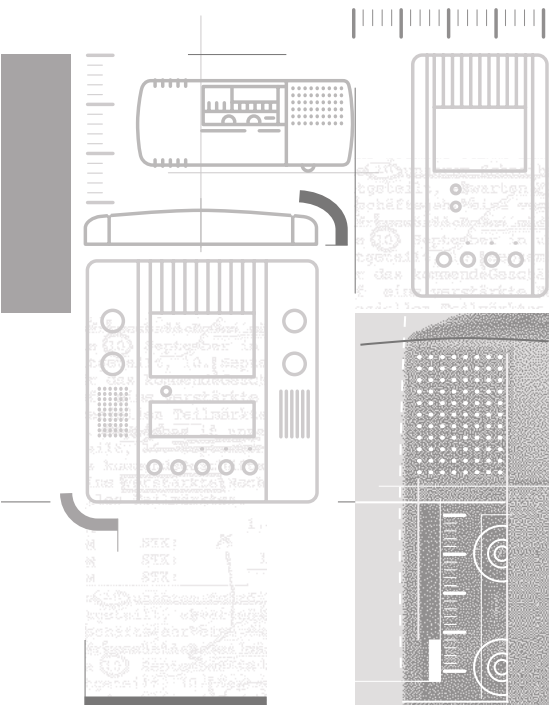

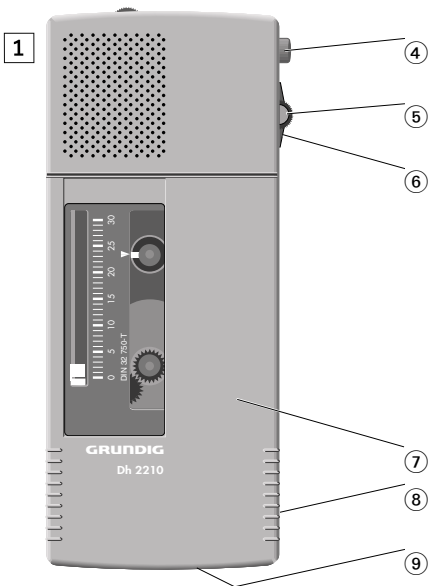

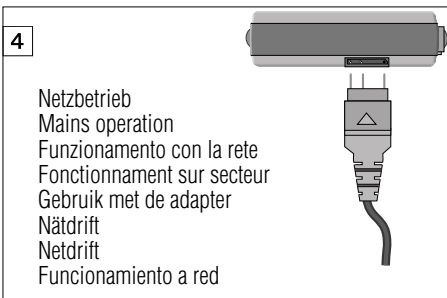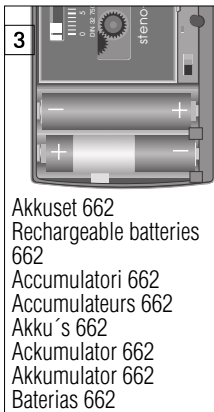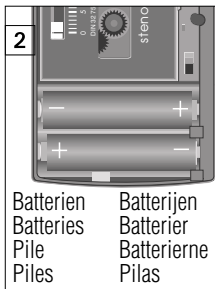

Supply Voltage

Battery, rechargeable battery, mains operation


 
Battery/rechargeable battery condition indicator (plus recording indicator): Lights up when recording. Goes out when the batteries/rechargeable batteries are weak. Recording is still possible until the motor stops (sound signal).


Battery operation with two 1.5V/LR 6/AA batteries (alkaline-manganese), leak-proof. Remove batteries from the unit when they are exhausted or if the unit is not to be used for a long period of time. No responsibility will be accepted for damage caused by leaking batteries!

Rechargeable battery operation with rechargeable batteries 662*. Charge the rechargeable batteries in the unit with the mains/charging unit 678CW*. Charging time approx. 18 hours. During charging, the unit can be used with all functions.

Battery/rechargeable battery compartment

Press and hold down the sliding cover button, then remove sliding cover from the unit.

 Inserting batteries: Ensure correct polarity (+/-); see figure  2. Inserting rechargeable batteries: Ensure correct positioning and polarity (+/-); see fig.  3. Refit and close sliding cover.

Mains operation with the mains/charging unit 678CW*; see figure  4.

 

Slide the plug till the end stop into the portable dictation machine.

Inserted batteries are disconnected;
the rechargeable batteries 662* is charged.

GB

Controls and Sockets


Please open folder at beginning of booklet!

- ① **Playback volume control** (turn)
- ② **Microphone**
- ③ **DICT. indication**
Lights up during recording.
- ④ **DICTATE button**
“ DICTATE” Press for recording (locks in).
- ⑤ **Switch-on lock** red ↔ green
Prevents accidental switching on.
- ⑥ **Slide-switch**
 - ▶▶ **Fast forward**
 - ▼ **Stop**
 - ▶ **Start playback**
Start recording:
Press “ DICTATE” button beforehand (locks in).
Stop recording: Set slide-switch briefly to “◀◀ REWIND” or “▶▶ FFWD”.
- ◀◀ **Rewind**
- ⑦ **Sliding cover**
- ⑧ **◀ LID LOCK button:**
Press and slide cover down.
- ⑨ **Mains/charging unit 678 CW connection**

Dh 2210



 The product is in accordance with following
EC-Directives: "89/336/CEE, 73/23/CEE, 93/68/CEE"

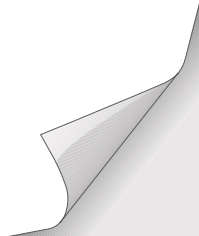

General

Do not expose the unit and the steno-cassettes to temperatures above 55 °C.

Dispose of old batteries and rechargeable batteries according to environmental regulations.

*Accessories indicated in the text are not supplied with the unit.

GB

Switch-on lock

 


Switch-on lock red ↔ green

Red visible:

Unit protected against inadvertent switch-on.

Cassette compartment



Inserting/removing steno-cassette:

“◀ LID LOCK” Briefly press the sliding cover button while pulling the sliding cover to its end stop.

Remove steno-cassette by tilting it out sideways.

For inserting the steno-cassette, see figure **1** at the beginning of booklet. Close sliding cover.

Steno-cassettes



Store steno-cassettes in their Multi-box* (transport precaution).

For dispatch: Dictation folder 741* for two steno-cassettes and dictation documents (DIN A4).

Recording

Microphone and recording indication

Microphone

Speaking distance approx. 5 cm - 10 cm;
decrease in the case of high ambient noise.

DICT. Indication


(plus battery/rechargeable battery indicator)

- Lights up during recording.
- Goes out when the batteries/rechargeable batteries are exhausted (page 1).

Recording

Every new recording automatically erases the existing recording on the tape.


Recording


Press “ DICTATE” button (locks in).

Set slide-switch to “ START”:

- »DICT.« lights up; tape runs.
- A warning signal sounds if no cassette is fitted and at tape end.

Recording pause


Set slide-switch to “ STOP”:


- »DICT.« goes out.
- Recording button “ DICTATE” remains locked in.


Set slide-switch to “ START”:

- »DICT.« lights up; tape runs.

Repeating words and correcting text

Set slide-switch in the “ REWIND” position:

- The recording button “ DICTATE” unlocks.
- The tape is briefly rewound then stops for word repeating.

If you wish to hear only the last few dictated words: release slide-switch (“ START”).

To listen to long text passages,

keep slide-switch in “◀◀ REWIND” position:

- The tape is rewound until the slide-switch is released (“▶ START”).

Resuming dictation

During “▶ START”, press “▲ DICTATE” button (locks in) at desired text passage:

- “DICT.” indication lights up; tape runs.

Concluding recording

Briefly move slide-switch to “◀◀ REWIND” (or “▶▶ FFWD”):

- The “▲ DICTATE” button unlocks.

Set slide-switch to “Ⓢ STOP”.

Erasing recordings

Erasing words or text passages

Press and hold down the “▲ DICTATE” button. Keep slide-switch in “◀◀ REWIND” position for duration of erasure:

- “DICT.” indication lights up.

Release “▲ DICTATE” button (locks in):

- The tape is rewound and is erased.

Erasure of a steno-cassette

outside the unit: With erasure magnet 616*.

Playback

Playback

Starting playback

Set slide-switch to “▶ START”:
Adjust desired volume (turn).

Concluding playback

Set slide-switch to “◀ STOP”.

GB

Rewind/fast Forward

Rewind

Keep slide-switch in “◀◀ REWIND” position;
the tape is briefly rewound then stopped:
if you wish to hear only the last few dictated words (word repetition),
release the slide-switch (“▶ START”).
If you wish to continue rewinding, keep the slide-switch in “◀◀ REWIND” position.

Fast forward

Keep slide-switch in “▶▶ FFWD” position.

Care and Maintenance

The **housing** should only be cleaned with a soft cloth which picks up dust. Polishing or cleaning agents may damage the surface.

Parts contacting the tape should be checked from time to time for contamination by tape abrasion,

see illustration at the end of this booklet.

If cleaning should be necessary, use a cotton wrapround soaked in cleaning benzine.

Never use a metallic or other hard object!

- Remove the steno-cassette from the cassette compartment.
- Switch the unit on: “▲ DICTATE” - “▶ START”. Warning signal sounds as no steno-cassette is in the cassette compartment!
- Press one of the two bolts **A** in direction of the cassette compartment.
- Clean the tape-contacting parts:
Rubber pinch roller **B**, capstan **C**, sound head **D**, and erase head **E**.

In the event of malfunctions, contact your specialised dealer.

Repair note on mains/charging units 678CW*:
Only original spare parts can be used. The mains lead must only be replaced by a specialist!

Subject to technical alterations and alterations in styling. E. and O.E.

GB

Figure to text "tape contacting parts" , page 7.

GB 7.

