






User controls on the ProMic 800 FX microphone

Recording sensitivity, 3 switch positions:

■ Dictation – ■ Dictation/Conference – ■ Conference



- ▲ Turn on recording: Press the red button »▲«.
- ▶ Start recording: Push the slide switch to »▶ START«. The recording indicator lights up. 
- ⊖ Recording pause: Push the slide switch to »⊖ STOP«. The recording indicator starts blinking. 
- ◀ ▶ Stop recording: Push the slide switch briefly to »◀ REW« or »▶ FFWD«;
- ⊖ then to »⊖ STOP«.
- ▶ Playback: Push the slide switch to »▶ START«.
- ◀◀ Short rewind: Push the slide switch to »◀◀ REW«.
- ▶▶ Fast forward: Slide switch to »▶▶ FFWD«. On the desktop dictation machine St 3110, the slide switch in the »▶▶ FFWD« position has no function.
- # Index/End/Info mark: The left »#« and right »#« blue buttons have the same function depending on the equipment options on the desktop dictation machine.

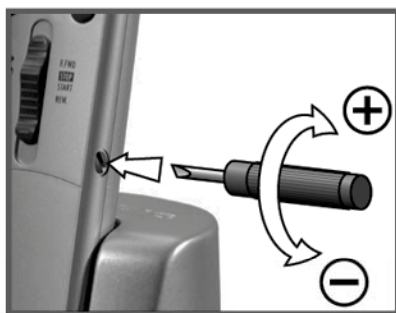

Slider switch (detents ⊖/stops ⊕).



The CE mark confirms that the device corresponds to the relevant guidelines of the European Union.