 


DIGINOTICE


ENGLISH



CONTROL ELEMENTS

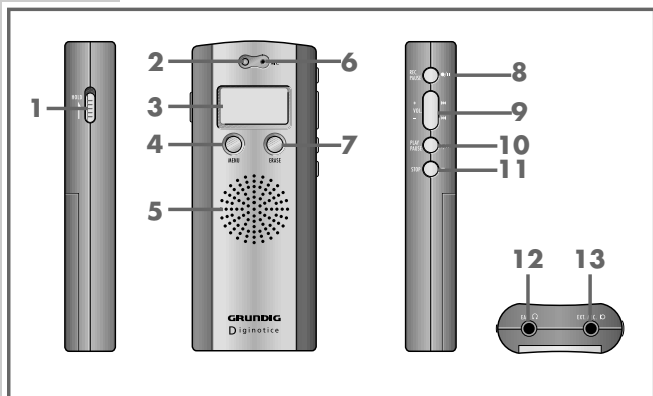

- 1 Safety lock »HOLD«
- 2 Recording pilot lamp (LED)
- 3 LCD display
- 4 Menu button »MENU«
- 5 Loudspeaker
- 6 Built-in microphone (MIC.)
- 7 Erase button »ERASE«
- 8 Recording/pause button »REC/PAUSE«
- 9 Select/volume button »+VOL-«
- 10 Play/pause button »PLAY/PAUSE«
- 11 Stop button »STOP«
- 12 Earphone socket (EAR Ω)
- 13 Socket for external microphone (EXT.MIC. IO)

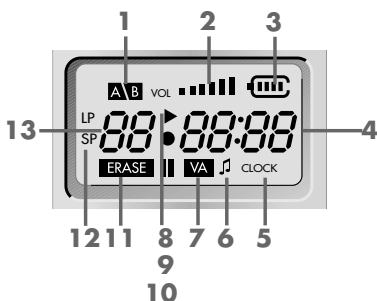LCD DISPLAY



- 1** Dictation folder (A, B)
- 2** Playback volume (VOL)
- 3** Battery state ()
- 4** Recording time (MM:SS)
or clock time (HH:MM)
- 5** Clock setting (CLOCK)
- 6** Sound signal setting ()
- 7**. Voice activation setting (VA)
- 8** Playback (▶)
- 9** Recording (●)
- 10** Pause (||)
- 11** Erase (ERASE)
- 12** Recording mode (LP, SP)
- 13** Dictation number (00...99)

OPERATION

1. Putting into operation


 

 
Inserting batteries


Insert 2 AAA (LR03) alkaline batteries into the battery compartment of the dictation machine.


- The current settings are shown in the display.

Battery display

The battery symbol in the display shows the remaining battery capacity in six levels:

»«, »«, »«, »« – the battery capacity reducing from 100% to 10%.

»«, the batteries are nearly empty, this is indicated by two signal tones. Playback and recording are ended automatically, the functions can only be selected for a short time.

The battery symbol »« flashes, the batteries are empty, this is indicated by three signal tones.

Playback and recording are ended automatically, the functions cannot be selected.

The batteries must be replaced.

2. Safety lock »HOLD«

As long as the safety lock is activated, all buttons are locked.

- In the display flashes »HOLD« (2 to 3 times) each time a button is pressed.

To unlock all buttons, slide the »HOLD« button against the direction of the arrow.

3. Power saving mode

In the power saving mode, no control function is possible.

– Only the current clock time and the battery state are indicated in the display.

A pressure on any button (except the »STOP« button) ends the power saving mode and switches the dictation machine in normal operating mode.

4. Normal operating mode

In the normal operating mode, all functions can be called up.

– The current settings are shown in the display.

Using the »STOP« button, any function can be ended or cancelled. After that, the machine returns in normal operating mode. If no function is activated within one minute, »Idle« will flash in the display and the machine switches in the power saving mode.

5. Folder selection

Every pressure on the »MENU« button in normal operating mode switches the folder in the cycle A-B-A... . Each folder can accommodate up to 99 dictations (the total number of dictations in both folders is 128).

Automatic folder switching

If the number of 99 dictations is reached in one folder, the machine switches automatically to the other folder provided there is free memory space available.

6. Recording

To start recording, press the »REC/PAUSE« button. During recording, the red LED is permanently lit and the recording symbol » ● « is visible in the display.

- The display shows the current dictation number and the elapsed recording time in minutes/seconds (e.g.: »01 ● 00:05«).
- When starting a new dictation, the dictation number is automatically increased.

Recording pause

Press the »REC/PAUSE« button.

- The »||« symbol and the recording LED flash additionally in the display.

To continue recording, press the »REC/PAUSE« button again.

Recording end

Press the »STOP« button to end recording.

- The display now indicates the current dictation number and the current clock time in hours/minutes (e.g.: »01 20:45«)

Memory full indication

When the memory is full, »FULL« flashes in the display.

In order to record new dictations, it is necessary to previously delete stored dictations.

7. Playback

To play back a dictation, press the »PLAY/PAUSE« button.

- The current recording is played back.
- The display shows the remaining playing time of the current recording (backward counting).

To play back a certain dictation, it is necessary to first open the folder »A« or »B« using the »MENU« button, and then to select the desired dictation using the »+VOL-« button.

Playback volume

Adjust the desired playback volume using the »+VOL-« button.

- The display shows the set volume level.

Playback pause

During playback, press the »PLAY/PAUSE« button.

- The »||« symbol flashes in the display. Press the »PLAY/PAUSE« button again to continue playback.

Playback end

Press the »STOP« button to end playback.

- When the end of the last dictation is reached, the machine switches automatically in normal operating mode.

8. Deleting dictations

Deleting a certain dictation

Select the number of the dictation to be deleted then press the »ERASE«- button.

– »ERASE« flashes in the display.

Press the »ERASE« button again.

– The selected dictation is deleted.

– When the dictation is deleted, the number of the following dictations is decreased by one.

To cancel the delete function, press the »STOP« button.

Deleting all dictations

To delete all dictations, press the »ERASE« button and hold it down 3 seconds.

– »ALL« flashes in the display.

Press the »ERASE« button again.

– All dictations stored in the folders »A« and »B« are deleted.

9. Using an external microphone

When connecting an external microphone with 3.5 mm jack plug to the »EXT.MIC. I/O« socket, the built-in microphone is switched off and the recording takes place via the external microphone.

OPERATION

10. Using an earphone

When connecting an earphone with 3.5 mm jack plug to the »EAR Ω« socket, the built-in loudspeaker is switched off.

11. Copying dictations


It is possible to copy dictations from the Diginotice to a PC, CD-recorder or cassette recorder. For that, the supplied phono cable must be connected with the »EAR Ω« socket on the Diginotice and the Line-In input of the recorder.

Start the recorder.

Press the »PLAY/PAUSE« button.

Set the output level using the »+VOL-« button.

– When connecting the phono cable, the built-in loudspeaker is switched off.

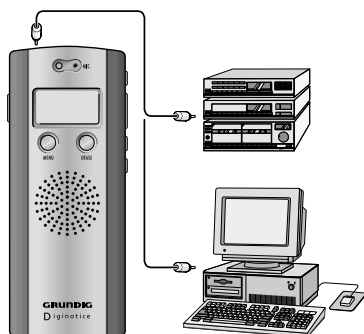

SETTINGS

1. Activating the settings

When in normal operating mode, press and hold down the »MENU« button until »LP« or »SP« flashes in the display.

Repeatedly pressing the »MENU« button selects one after the other the following settings in the display:

- VA: voice-activated recording,
- c/d: conference/dictation recording,
- 🎵: sound signal,
- CLOCK: clock time.

2. Changing settings

Recording mode (SP/LP)

- »SP« or »LP« flashes in the display.

Use the »+VOL-« button to switch the recording mode:

LP = longplay recording,

SP = standard recording.

Voice Activation (VA)

If this function is selected, recording is only started when someone speaks (noise activation) and is automatically interrupted during pauses (silence).

Press the »MENU« button again.

- »VA« flashes in the display.

Use the »+VOL-« button to switch this function on and off.

VA = voice-activated on.

Microphone sensitivity (c/d)

Press the »MENU« button again.

- »c« or »d« flashes in the display.

Use the »+VOL-« button to select the desired microphone sensitivity:

c = conference recording,

d = dictation recording.

SETTINGS

Sound signal (🎵)

Press the »MENU« button again.

– »🎵« flashes in the display.

Use the »+VOL-« button to switch this function on and off.

»🎵« = sound signal each time a button is pressed.

Clock time

Press the »MENU« button again.

– »CLOCK« and, e.g. »00« for the hours, flashes in the display.

Use the »+VOL-« button to set the hours.

Press the »MENU« button once again.

– »CLOCK« and, e.g. »00« for the minutes, flashes in the display.

Use the »+VOL-« button again to set the minutes.

3. Ending the settings

When the last setting is completed (clock time), pressing the »MENU« button switches the Diginotice back in normal operating mode.

If one or several settings have been carried out, the Diginotice switches automatically in the normal operating mode and activates all settings about 15 seconds after the last pressure of a button. Press the »STOP« button to cancel the settings.

TECHNICAL DATA

Frequency response:

300-3.500 Hz

Sampling rate:

AtPLL-3.6864 MHz, 7.2 kHz

Compressions rate

AtPLL-3.6864 MHz, 4.4 kHz

Microphone:

Capacitor microphone (mono)

Output:

Earphone (mini plug, mono), 1 MP in
16 Ohm (preferably 32 Ohm)

Maximum output power:

90 mW in 64 Ohm

Power supply:

3 V =, LR03, two alkaline batteries
(AAA or UM-4)

Battery life:

„AAA“ batteries at normal temperature (25° C):
about 4.5 hrs at recording
about 4.0 hrs at playback

Recording medium:

Built-in Flash memory
(SP max. 64 min., LP max. 108 min.)

Max. number of dictations:

99 per folder (total 128)

Operating temperature:

0-40° C

Dimensions:

105 x 42 x 17 (LxDxH)

Weight:

40 g without batteries

Accessories:

1 user manual
1 earphone
1 phono cable
2 batteries „AAA“, 1.5 V
Alterations reserved.

☑ The product is in accordance with following
EC-Directives: "89/336/CEE