GRUNDIG Business Systems

Digta»

Digta W/LAN-Adapter

Instruction manual

1



Business Systems

GRUNDIG

This operating manual contains important instructions for safe and efficient handling of the Grundig Business Systems Digta W/LAN-Adapter (hereinafter referred to as "device"). This operating manual is part of the device and must be kept accessible in the immediate vicinity of the device for persons working on and with the device. Carefully read and make sure you understand this operating manual and all product safety labels prior to starting any work with the device. The basic prerequisite for safe work is compliance with all specified safety and handling instructions. In addition, all local accident prevention guidelines and general safety regulations effective at the implementation site of the device apply. Illustrations in this operating manual are provided for basic understanding and can vary from the actual model of the device. No claims can be derived from the illustrations in this operating manual.

Disclaimer

All information and instructions in this operating manual have been provided under due consideration of applicable guidelines and regulations, the current and known state of the art, as well as our many years of in-house experience. The manufacturer assumes no liability for damages due to:

- Failure to comply with the instructions in this operating manual
- Improper use / misuse
- Wilful operation by non-authorized persons
- Unauthorized conversions or non-approved technical modifications
- Use of non-approved spare parts

The originator is solely liable to the full extent for damages caused by such conduct. The agreed upon obligations in the delivery contract, the general terms and conditions, the manufacturer's delivery conditions, and the statutory regulations valid at the time the contract was concluded, apply.





Copyright

This operating manual is protected by copyright. No part of this operating manual may be reproduced in any form or incorporated into any information retrieval system without written permission of Grundig Business Systems GmbH ("the manufacturer"). Delivery of the operating manual to third parties, duplication in any form - including excerpts - as well as exploitation and/or communication of the content, are not permitted without a written declaration of release from the manufacturer. Actions to the contrary make damage compensation mandatory. We reserve the right to enforce additional claims.

The manufacturer © Grundig Business Systems GmbH Weiherstraße 10 D-95448 Bayreuth holds the copyright.



Contents

General Explanation of signal words and symbols	5 5
Safety information Intended use Special hazards	6 6 6
CE note	9
Scope of delivery	9
Introduction	10
Preparation	10
Display, LEDs	10
Basic configuration	10
Administration of Digta W/LAN-Adapters in other networks Locating Digta W/LAN-Adapters in networks	12 12
Selection of used network adapters Time-out indicator and field strength	12 13
Column sorting	13
•	
Web Configuration	14
Web Configuration	14 16 18
Web Configuration Setup LAN WI AN	14 16 18 19
Web Configuration Setup LAN WLAN Transfer	14 16 18 19 22
Web Configuration Setup LAN WLAN Transfer SMTP	14 16 18 19 22 23
Web Configuration Setup LAN WLAN Transfer SMTP FTP	14 16 19 22 23 25
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log	14 16 18 19 22 23 25 27
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log Transfer of dictations	14 16 18 19 22 23 25 27 29
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log Transfer of dictations Battery charging.	14 16 18 19 22 23 25 27 29 29
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log Transfer of dictations Battery charging Extended configuration	14 16 18 19 22 23 25 27 29 29 29 29
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log Transfer of dictations Battery charging. Extended configuration Messaging Functions	14 16 18 22 23 25 27 29 29 29 29 29 23
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log Transfer of dictations Battery charging Extended configuration Messaging Functions Special functions Templates	14 16 18 19 22 23 27 27 29 29 29 29 30 32 33 33 33
Web Configuration	14 16 18 19 22 23 25 27 29 29 30 32 33 33
Web Configuration Setup LAN WLAN Transfer SMTP FTP Event Log Transfer of dictations Battery charging Extended configuration Messaging Functions Special functions Templates. Firmware Update	14 16 18 22 23 25 27 29 29 29 30 32 33 35 38





General

Explanation of signal words and symbols

Warnings are indicated by symbols. In addition they are introduced with signal words that express the scope of the hazard.

- All instructions must be strictly complied with!
- When working always act cautiously to prevent accidents, personal injury, or property damage!

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

A WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION, used with the safety alert symbol indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury. It indicates specific actions which prevent from damage to the device and from loss of dictations.



Indicates useful tips and recommendations as well as information for efficient and trouble-free operation.



Safety information

Intended use

The Digta W/LAN-Adapter is for exclusive use with a Digta docking station and a Digta dictation machine to transfer stored dictations via LAN (local area network) or WLAN (wireless LAN, WIFI) without a PC.

Special hazards

Electrical voltage

Danger of electric shock!

- Do not touch the power supply with wet hands.
- Do not insert metal objects or the like into the power supply.
- Never open the power supply or modify the plug or cable.
- Do not use the power supply if the housing or connection cable is damaged or the power supply does not function properly.
- If the power supply is dropped, have it checked by an authorized dealer to ensure that it functions correctly and safely.

Disregarding these precautions means risking a fatal electric shock.

Connecting Digta W/LAN-Adapter

Danger of fire, explosion and overheating!

- Use the power supply only with the line voltage specified on the rating label.
- Use the power supply only with its original connection cable or adapter (European, UK and USA version).
- Never use other connection cables or adapters with different plugs.
- Do not place heavy objects on the power supply or connection cable, and do not cover the power supply.
- Use the power supply only in a dry indoor environment.



Business Systems

GRUNDIG

- Protect the power supply from moisture in the form of water and high humidity.
- Do not bend the connection cable of the power supply.
- Do not operate or store the power supply near heaters or direct sunlight. Ensure adequate ventilation. The permitted temperature range is: -4°F (-20°C) to 158°F (70°C) for storage 23°F (-5°C) to 95°F (35°C) for operation
- Grundig Business Systems power supplies are only to be used with Grundig Business Systems office equipment.
- Pull the power supply out of the socket to separate the device from the power grid.
- Unplug the power supply before cleaning it.
- Clean the power supply only with a soft, dry cloth. Do not use chemical cleaning agents such as alcohol, thinner, gasoline or the like.

Disregarding these precautions means risking fire, explosion or overheating.

Particular groups of persons

A CAUTION

Risk of injury!

- Do not leave the device unattended and use it with extreme caution if children or persons who cannot assess the dangers are nearby.
- Keep the device away from persons (including children) who are unable to use it safely due to their physical, sensory or mental limitations, lack of experience or lack of knowledge.

Disregarding these precautions means risking injury.





Obstacle

Stumbling hazard!

 Ensure that the power supply is always in a safe position and that neither the power supply nor any cables connected to the device or to the docking station constitute obstacles.

Disregarding these precautions may lead to a stumbling hazard.

Electronic components

NOTICE

Risk of damage and void warranty!

- Protect the device from moisture (such as rain or water spray).
- Do not place the device near a heater nor in direct sunlight.
 - The permitted temperature range is: -4°F (-20°C) to 158°F (70°C) for storage 23°F (-5°C) to 95°F (35°C) for operation
- Do not open the device under any circumstances.
- Do not modify the device.

Disregarding these points can cause the device to be damaged and the warranty to become void.

Operating Digta W/LAN-Adapter

WARNING

Loss of data!

If you are electrostatically charged and touch a device which is switched on, the device may switch off automatically to protect against damage. Due to technical failures within networks or devices during data transmission loss of data can occur.



Business Systems

GRUNDIG

- Please check your recording to ensure that it is complete and repeat it if necessary.
- Please ensure that the transmission was successfull.

Disregarding these precautions means risking the loss of data.

NOTICE

Installation and configuration!

The installation and configuration of the Digta W/LAN-Adapter needs to be done by a system administrator.

Cleaning

NOTICE

Risk of damage!

- Clean the device only on the outside with a dry, soft cloth.
- Do not use chemical cleaning agents.

Disregarding these instructions can cause the device to be damaged.

CE note

CE The CE mark confirms that the device corresponds to the relevant guidelines of the European Union.

Scope of delivery

Digta W/LAN-Adapter Power supply unit RJ45 network cable CAT-5 WIFI antenna



Introduction

The Digta W/LAN-Adapter is used in combination with a Digta dictating machine and a Digta Station for the transfer of dictations directly over the LAN (wireless LAN optional). This means that a Digta Station with the Digta W/LAN-Adapter can also be used in places where no PC is available.

Preparation

In order to set up the Digta W/LAN-Adapter a PC with Microsoft Windows[®] operating system (Windows Vista, 7, 8, 8.1, 10) is required, together with an Ethernet network with RJ45 connection. Connect the RJ45 connector of the Ethernet cable to the "ETHERNET" socket and your network, and the connector of the power supply to the " \ominus - σ - \oplus " socket.

İ TIP

The Digta W/LAN-Adapter may also be connected directly to the network card of a PC for configuration. In this case a "crossed" cable is required (not included in the scope of supply).

Display, LEDs

There are three LED indicators on the Digta W/LAN-Adapter.

ETHERNET:	jittering = data transfer
INTERNET:	without function
WLAN:	on = wireless LAN connection
	off = LAN connection

Basic configuration

For configuration purposes it is necessary to assign an IP address to the Digta W/LAN-Adapter and incorporate it into the existing network.

To do this, run the configuration tool "DigtaLANConfig.exe" on your PC.

İ TIP

Configuration is only possible via an Ethernet cable connection! Even if an optional WLAN connection is present, it is not suitable for configuration!

GRUNDIG Business Systems

Digta»

hernet MAC	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout (sec)	WLAN (2)	ETP Server	FTP Din	ector
22544709913	Diata WI AN	Support	V22	Yee	 10 24 1 66	255 255 255 0	10.24.1.254	n (000)	0	10.24.1.19	,	
325447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	1	
igta(₩)LAN Co use DHC	P		WebConfig	uration	Group For a devic F) Configuration II selected ces actory Reset						
igta(W)LAN Co ☑ use DHC IP Address	pnfiguration P 10.34.1.65		WebConfig Advanc	uration ed	Group For a devic F.	Configuration Ill selected ces actory Reset Ise Template						
igta(W)LAN Co ☑ use DHC IP Address Netmask	pnfiguration P 10.34.1.65 255.255.255.0		WebConfig Advanc	uration ed	Group For a devic F. U Firr	Configuration Il selected ces actory Reset Ise Template mware Update						

Using this tool all stations in the LAN can be displayed and configured with an IP address. If there is a DHCP server in your network environment, highlight the station to be configured in the list and activate the "use DHCP" option. *The fixed allocation of an IP address through the DHCP server (recommended), requires the MAC address shown in the "IP" column.*

You will find information on this in the documentation of your DHCP server.

Alternatively, a fixed IP address may also be allocated to each station. Enter the relevant data for this in the "**DigtaLAN Configuration**" field.

Finally, activate the settings by clicking on the "Apply" button. The settings are then transferred to the Digta W/LAN-Adapter and activated.

themet MAC	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout (sec)	WLAN (%)	FTP Server	FTP Directory
825447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	7
825447C8913	Digta_WLAN	Support	V2.2	Yes	10.34.1.66	255.255.255.0	10.34.1.254	0	0	10.34.1.18	1
				Suc	cess		×				
)igta(W)LAN C	onfiguration			Di	gta(W)LAN co	onfiguration suc	cessful.				
🗹 use DH0	P		WebConfigu	rati		_	01				
IP Address	10.34.1.65		Advance	d			UK				
					U	Ise Template					
Netmask	255,255.255.0				Firr	mware Update					
Gateway	10.34.1.254		Apply		Ew	Undate Recet					

The new IP address for the configured station should now appear in the list.

Administration of Digta W/LAN-Adapters in other networks

Locating Digta W/LAN-Adapters in networks

The network number range for locating the Digta W/LAN-Adapter can be entered using the menu item "File/Settings". VLAN networks are also supported.

Scan Settings ×					
UDP Broadcast					
TCP Scan Range					
10 . 34 . 1 . 10 - 150					
Cancel OK					

The Digta W/LAN-Adapters that are in the configured network number range can be searched for and displayed in the list by using the "Scan." menu item or pressing F5.

Selection of used network adapters

Locally available network adapters are displayed under the "File/Interfaces" menu item. The network adapters that are actually to be used for UDP broadcast can be selected. This avoids having adapters that are found through various interfaces appear more than once on the list.

Business Systems

GRUNDIG

Digta»

Contro	ller der Far	milie Real	tek PCIe (GBE	
Virtual	Box Host-C	Only Ethe	rnet Adap	ter	
VMwar	e Virtual Et	thernet A	dapter fo	r VMnet1	
VMwar	e Virtual Et	thernet A	dapter fo	r VMnet8	

To configure the adapters, mark one or more from the list by clicking on them. Then click on the configuration button in the boxes under the list.

Time-out indicator and field strength

In the list of all LAN and WLAN-Adapters, the condition of the network connection can also be seen. The "Timeout [sec]" column shows the duration of the connection time-out in seconds. If the connection is good, the display will always show "0".

The value in the "WLAN" column indicates the current connection strength. Values of more than 50 indicate a very good connection. The maximum is 70.

Column sorting

The sequence in which the Digta W/LAN-Adapters are displayed in the overview list can be alphabetical or numerical. Click the heading of the desired column for the corresponding arrangement.





Web Configuration

Following successful basic configuration, the Digta W/LAN-Adapter is available in the LAN and all further settings may now be made via web browser.

To do this, highlight the station to be configured in the list.

Pressing the "*WebConfiguration*" button should open your web browser and a window will appear asking for "*User Name*" and "*Password*".

Authenticati	ion Required
?	A username and password are beeing requested by http://192.168.0.10. The site says: "Secure"
User Name:	edm
Password:	•••
	OK Cancel

The factory settings for the user name and password are both "*edm*" and can be changed individually in the following stages of the procedure via the web configuration.

Enter "edm" in the "Name" field and again in the "Password" field and confirm with the "OK" button.

1 TIP

Alternatively you can also launch your web browser and enter the IP address configured for the Digta W/LAN-Adapter in the address column (e.g. http://192.168.0.10).





The following v	web interface	then appears	for further	configuration.

turn voice into 🌗	action			GRUNDIG Business Systems
Setup LAN WLAN Transfer SMTP FTP Log License	Info Version Ethernet MAC WLAN MAC UTC VPN Language	Digta W/Lan Adapter 7825447C8A27 7825447C8A27 2021-03-04 13:09:0	V2.3RC3	
	— Digta W/LAN—	Device name	DIGTALAN	
	Access password	Nama	La dan	
		Password	•••	
		Confirm password	•••	
	Apply	Cancel		
	Configuration Erase			

The individual menu items can be seen in the left-hand section of the web interface, with the associated options in the right-hand section. The active menu is shown underlined. The factory setting for the language is "English".

To display the interface in another language, select the desired language in the **Language** field and click on "*Apply*".

NOTICE

Javascript must be enabled to ensure correct functioning!





Setup

turn voice into 🌗	action	_		GRUNDIG Business Systems
Setup LAN WLAN Transfer SMTP FTP Log	Info Version Ethernet MAC WLAN MAC UTC VPN	Digta W/Lan Adapter 7825447E8F41 7825447E8F41 2020-12-22 15:53:4 [AF_INET]46.166.17	4 3.131 1194	
License Digta»	Language Apply		English V	
	Access password	Device name	DIGTALAN	
		Name Password Confirm password	edm •••	
	Configuration Erase	Cancer		

Info

The "Info" field shows information on the hardware and firmware.

- Version: DSS Mover version and the firmware version
- Ethernet MAC: MAC address of the LAN interface
 - WLAN MAC: MAC address of the wireless LAN interface (optional). In the case of an existing module, this is not displayed until configuration is complete and a wireless LAN connection has been successfully established
 - UTC: Date and time of the selected NTP server
 - VPN: external VPN IP address







Language

Various languages for the interface are listed here for selection.

Digta W/LAN

An individual name for the Digta W/LAN-Adapter can be entered in the "*Digta W/LAN*" field. If several devices are used in the LAN, this enables you to differentiate between them and, where appropriate, specify the location. This name is also shown in the DigtaLAN Configuration tool.

In the "*Access password*" field you may change the name and password for access to configuration as you wish.

Configuration

The "*Erase*" button in the "*Configuration*" field can be used to erase all the Digta W/LAN-Adapter settings and restore the factory settings.

?	Delete configuration and restore factory settings ?
	OK Cancel

A security confirmation question appears before the configuration is deleted.



LAN

LAN	
 IP configuration by DHCP 	
C Fixed IP configuration	
IP address	192 168 0 10
Netmask	255 255 255 0
Gateway IP	192 168 0 1
Primary DNS	192 168 0 1
Secondary DNS	
Settings	
Apply Cancel	

The "LAN" page shows the IP address set for the LAN interface, already selected with the DigtaLAN Configuration tool. Changes can be made here, e.g. to the Gateway IP.

By clicking on the "*Apply*" button, these settings are adopted and enabled in the Digta W/LAN-Adapter configuration.

İ TIP

If an error is made during input, incorrect data is entered or a test is unsuccessful, the input fields in question are indicated by a red symbol ⁽²⁾. Successful completion of the tests described below is indicated by a green symbol ⁽²⁾.

Changing the IP address will interrupt the connection to the web interface! If necessary, restart the configuration process by entering the new IP address in your web browser.







WLAN

WLAN		
🗖 WLAN - enable		
	SSID	WLAN_Test
	Security	WPA-PSK + WPA2-PSK
WEP128 keys		
	Key 1 🔎	
	Key 2 C	
	Кеу З С	
	Key 4 C	
IP address		
	IP address	
	Netmask	
	Gateway IP	
	Primary DNS	
s	econdary DNS	
Apply	Cancel	WLAN disabled

The Digta W/LAN-Adapter may optionally be fitted with a WIFI antenna and can be configured in the "*WLAN*' field.

The Digta W/LAN-Adapter supports WIFI 802.11b/g/n. Activate the "*WLAN - Enable*" option to activate wireless LAN.

WLAN	
WLAN - enable	
SSID	WLAN_Test
Security	WPA-PSK + WPA2-PSK

In the "**SSID**" field enter the name of your wireless network and in "**Security**" select the encryption type used by your wireless network.

Security	WPA-PSK-TKIP
	NONE
	WEP
	WPA-PSK-TKIP
	WPA-PSK-AES
	WPA2-PSK-AES
	WPA-PSK + WPA2-PSK
	WPA2-PSK + WPA-PSK

It is necessary to enter the key(s) in the relevant field for each encryption type (WEP128 key or WPA key).

WEP128 keys		
Key	1 @	
Key	2 C	
Key	зо	
Key	4 C	
WPA key		







IP address

IP address	
Use DHCP	
IP address	
Netmask	
Gateway IP	
Primary DNS	
Secondary DNS	

If there is a DHCP server in the wireless LAN environment that will automatically assign the address, activate the "*use DHCP*" option. Alternatively, a fixed IP address for wireless LAN can be entered here.

Settings

Settings			
Apply	Cancel	testing WLAN connection	

In order to make the settings effective, click on the "Apply" button.

This will initiate a connection test and the status field shows the flashing display **"testing WLAN connection"**. This test takes approx. 15-20 seconds.

Settings			
Apply	Cancel	WLAN connection successful	al -
1			

If the connection can be established, "**WLAN connection successful**" appears. There is also a symbol to show the connection strength.

Settings			
Apply	Cancel	WLAN connection failed	
1			

If the connection cannot be established, "WLAN connection failed" appears.



İ TIP

The fixed allocation of a WLAN IP address through the DHCP server (recommended) requires the MAC address of the DigtaW/LAN-Adapter. On successful completion of the connection test this will be displayed in the Info field of the Setup page.

Transfer

Transfer					
C SMTP - Transfer via e-mail					
FTP - Transfer to FTP server					
Remove transferred dictation files					
Settings Apply Cancel					

On the **"Transfer**" page a selection can be made between two dictation transfer types:

- SMTP Transfer of dictations via e-mail
- FTP Transfer of dictations to an FTP server

If the "*Remove transferred dictation files*" option is checked, successfully transferred dictations will be deleted from the Digta, thus preventing multiple transfers. It also means that the full recording capacity of the Digta will be restored on completion of the transfer.

To save the settings click on the "Apply" button.



i

TIP

When the Digta is plugged into the Digta Station, the Digta W/LAN-Adapter makes a single transfer of all dictations on the mobile device. Any dictations remaining on the mobile device will be transferred again the next time the Digta is plugged in. A protection mechanism prevents dictations with the same name from being overwritten in the target folder by automatically adding #0, #1 etc. to the file name (e.g. DICT0001#0.dss).

SMTP

turn voice into 🗼	action	GRUNDIG Business Systems
Setup LAN WLAN Transfer SHTP FTP Log License	E-mail server DNS/IP address e-mail server Port E-mail sender address Alias e-mail sender Username Password E-mail recipient E-mail recipient address configured E-mail destination address	25 SSL/TLS STARTTLS
	Test e-mail Test e-mail Settings Apply Cancel	- Transfer to FTP server

If dictations are to be sent by e-mail, the SMTP connection needs to be configured. If you have activated "*FTP transfer*" on the "**Transfer**" page no changes can be made on this page.







E-mail server

In the e-mail Server section, enter the access data for your e-mail account.

By convention, SMTP servers have received requests through port 25. However, in order to reduce spam, newer servers can also use port 587 for the receipt of e-mails addressed to authenticated users that are to be submitted to other mail servers.

An alias name can be given to the Digta W/LAN-Adapter, which will be displayed as the Sender name when the e-mail is sent.

E-mail recipient

If dictations are to be sent to a fixed address, activate "*E-mail recipient address configured*" and enter the e-mail destination address in the field.

Test e-mail/Settings

The "*Test e-mail*" button is used to carry out a connection test using the settings made before they are saved. A symbol near the button shows whether this test has been successful (green) or not (red).

During this test an e-mail containing the IP address, interface and MAC address of the Digta W/LAN-Adapter is sent to the configured recipient.

To save the settings permanently, click on the "Apply" button.





FTP

FTP server	
DNS/IP address FTP server	192.168.0.20
Port	21
Username	gbs
Password	•••
Server directory	FTP_Test
Passive mode Active mode Test FTP connection Test FTP	
Settings Apply Cancel	

If you have activated "*FTP transfer*" on the "Transfer" page, the necessary access data must be entered on this page.

If "SMTP transfer" has been activated on the "Transfer" page no changes can be made on this page.

Set up a user account on your FTP page to which the dictations are to be transferred. This account must have the following access authorisations:

- Reading and writing files
- Listing directories
- Creating subfolders





FTP server

Enter the IP address or DNS name of the FTP server, and the FTP port in the "**Port**" field (standard = Port 21).

Enter the Username for access to the FTP user account, the password and the path of the server directory.

Select whether the transfer is to be in "Passive mode" or "Active mode".

In "Active mode", the client opens a random port and gives the server the port number and its own IP address. In this mode, it is possible for the server and client to communicate with each other during the data transfer process.

In **"Passive mode**", the client sends a command, and the server opens a port and sends the client the port number and the IP address. This technique is used when the server fails to achieve a connection with the client.

The DNS/IP address and the server directory are displayed in the list of Digta W/LAN-Adapters in the "FTP server" and "FTP directory" columns.

Name	Location	F₩	DHCP	IP	Netmask	Gateway	Timeout(sec)	WLAN	FTP Server	FTP Directory
DIGTALAN	Becker	V1.6c	Yes	10.34.1.187	255.255.255.0	10.34.1.254	0	U		1
Schuberth	Büro Schuberth	V1.5	Yes	10.34.1.151	255.255.255.0	10.34.1.254	0	0	testingqm	/inbox1/
PM-DIGTALAN	DIGTALAN	V1.6c	Yes	10.34.1.31	255.255.255.0	10.34.1.254	0	40	testingqm	/pool/
DIGTALAN01	Service	V1.5	Yes	10.34.1.109	255.255.255.0	10.34.1.254	0	0	PC001583	edm/

Test FTP connection/Settings

Pressing the "**Test FTP**" button initiates a connection test. A symbol near the button shows whether this test has been successful (green) or not (red). During the test a test file is sent to the FTP server; this will be deleted following successful transfer.

To save the settings permanently, click on the "Apply" button.



Event Log

Event Log Delete Refresh
Aug 24 08:59:22 DEVICE REMOVED Aug 24 08:59:28 DEVICE DETECTED Aug 24 08:59:29 TRANSFER NO DELETE Aug 24 08:59:29 SMTP Aug 24 08:59:29 Folder Konferenzen Aug 24 08:59:29 File: MODS0070.DS2 Aug 24 08:59:29 File: MODS0148.DS2 Aug 24 08:59:35 Transfer successful Aug 24 08:59:37 Transfer successful Aug 24 08:59:37 File: MODS0124.DS2 Aug 24 08:59:37 File: MODS0124.DS2 Aug 24 08:59:37 File: MODS_10124.DS2 Aug 24 08:59:37 File: MODS_101min#3.DSS Aug 24 08:59:37 File: MODS_10min#4.DSS Aug 24 08:59:37 File: MODS_10min#5.DSS Aug 24 08:59:37 File: MODS_20min#4.DSS Aug 24 08:59:37 File: MODS_20min#3.DSS Aug 24 08:59:37 File: MODS_20min#4.DSS Aug 24 08:59:37 File: MODS_20min#4.DSS

The Event Log records all the activities of the Digta W/LAN-Adapter. This makes it possible, for example, to trace successful and failed configurations, or the transfer of dictations.

The Event Log can be deleted by clicking on the "Delete" button

Delete Event Log ?	
OK Cancel	

A security confirmation question appears before the Event Log is deleted.



NOTICE

The Event Log is also deleted if the power supply is interrupted or if the Digta W/LAN-Adapter is restarted, e.g. if the device name is changed.

Date and time are automatically updated in the Event Log as long as the network is connected to the internet.

Transfer of dictations

Dictate in your usual way with the Digta. To transfer dictations from the device, connect the Digta, while switched on, to the docking station. Depending on the configuration of the Digta, the USB file transfer mode starts immediately or must be activated manually (consult your Digta's user guide). All dictations from all folders, except files with *"Postponed"* status, are now transferred.

The dictation device beeps once to indicate the end of the transfer. Only then should the Digta be removed from the docking station or USB cable. Two beeps indicate that there has been an error in transfer.

If there is a LAN connection this will be used as a priority for the transfer. If no LAN connection can be established, the wireless LAN connection is activated and used for the transfer (if configured, see chapter "WLAN").



TIP

The automatic data transfer is only activated when the slide switch on the Digta is in the stop position.

Only dictations made directly using a Digta can be transferred in the DSS/DSS Pro, WAV and MP3 format.

Battery charging

If your Digta is equipped with an accumulator, it can also be charged in the Digta W/LAN-Adapter. Please read the instructions for doing so in the Instruction Manual for your device.



TIP

A significant warming of the dictation device during accumulator loading in the Digta Adapter is normal. As is usual with quick chargers, a temperature sensor monitors the heating and switches off the charging current before a critical temperature is reached.



Extended configuration

hernet MAC	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout [sec]	WLAN [%]	FTP Server	FTP Dir	ecto
25447C8913	Digta WLAN	Support	V2.2	Yes	10.34.1.66	255.255.255.0	10.34.1.254	0	0	10.34.1.18	1	
25447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	1	
gta(W)LAN Co	onfiguration				Group For a	Configuration						
gta(W)LAN Co ☑ use DHC	onfiguration		WebConfig	uration	Group For a devir	o Configuration all selected ces actory Reset						
gta(W)LAN Co ☑ use DHC IP Address	phiguration P 10.34.1.65		WebConfig Advanc	uration ed	Group For a devia F	o Configuration all selected ces actory Reset Jse Template						
igta(W)LAN Cu use DHC IP Address Netmask	pnfiguration P 10.34.1.65 255.255.255.0		WebConfig Advanc	uration ed	Group For a devia F L Firm	o Configuration all selected ces actory Reset Jse Template mware Update						

The "DigtaLANConfig.exe" configuration tool allows expanded configurations of the Digta W/LAN-Adapters marked in the list and the activation of special functions when the "*Advanced*" button is clicked.

Name: PM-DIGTALAN	Firmware: V1.5
Time Server ptbtime1.ptb.de	Digta 7 sync
Data Communication	
🔲 use Data Communication	
FTP Server (Data Communicat	tion)
DNS / IP Address FTP	
Port 21	
Username tes	t
Password	2
Server directory /	
TCP Server	
DNS / IP Address	Port 27271





Each Digta W/LAN-Adapter can be assigned an individual name and location. For these entries, the "*Name*" and "*Location*" fields are available. The name entered corresponds to the device name in WebConfiguration.

Properties			×
Name:	DIGTALAN_3	Firmware:	V1.4i
Location	CHIRURGIE		
Time Server	3.openwrt.pool.ntp.org		

In order for date and time to be displayed correctly in the logfile, a time server should be entered in the "*Time Server*" field. It will be used for automatic time synchronization. The Digta W/LAN-Adapter uses this to determine the correct time in the Berlin time zone. The adjustment for German summer and winter time is made automatically.

If there is a check mark next to *"Digta 7 sync"*, the time setting of any connected Digta 7 will be synchronized with that of the time server. For that to happen, the Digta 7 must be configured for automatic clock synchronization.



Business Systems

GRUNDIG

Messaging Functions

The Digta W/LAN-Adapter supports data exchange between the Digta 420, Digta 422, and Digta 7 mobile dictation devices and DigtaSoft Pro and the Central Digta Configurator.

use Data Communication	
FTP Server (Data Commun	nication)
DNS / IP Address FTP	192.168.1.50
Port	21
Username	DMS_Test
Password	NEXEXER
Server directory	7

To use these functions, set up a user account on your FTP server that refers to the dictation network's central directory.

This account must have the following access authorisations:

- Reading and writing files
- Listing directories
- Creating subfolders

If messaging functions have been activated, this directory contains a "_DMS" folder in which data exchange with Digta 420, Digta 422, and Digta 7 mobile devices takes place. If the "_DMS" folder does not yet exist, the Digta W/LAN-Adapter will create it.

In the "Data communication" area, check the *"use data communication"* box and enter the corresponding information.

1 TIP

The central directory that has been set up in your dictation network can be found in the "NetConfig.ini" file under the entry "GlobalUserDir=".







Special functions

The entries under "TCP server" allow the Digta W/LAN-Adapter to be set up in a special operation mode for software integration. More about the functions can be found in the SDK documentation.

TCP Server	
DNS / IP Address	Port

The "DNS/IP address" and "Port" fields must remain empty if the Digta W/LAN-Adapter is to operate normally!

Templates

In order to simplify configuration for the use of multiple Digta W/LAN-Adapters, the configuration of one adapter can be transferred to a group of others. Right-clicking on a Digta W/LAN-Adapter in the "DigtaLANConfig.exe" list of configuration tools calls up a menu in which the configuration of the adapter can be chosen as template. Left-click on **"Set as template"**.

E G FOR FOR THE PLOT	Name	Location	FW	DHCP IF	<u>, </u>
/82544/FF4CF	DIGTALAN	DIGTALAN	Set As tem	plate	17 16 8.1.1
		_	Advanced		
<		III			
DigtaLAN Confi	iguration			- Group (Configuration
	ſ₽	WebCo	nfiguration	For all device	selected s
			and a l	Fa	ctory Reset
L use DH		0.05	Cancero III		
IP Address		Adv	Anceo	Us	e Template
IP Address Netmask		,Ad	/anceo	Us	e Template





In the next step, mark all Digta W/LAN-Adapters in the list that are to be configured according to the template and then click on the "**Use template**" button in the "Group Configuration" menu.

A confirmation prompt appears.

Ethernet MAC	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout (sec)	WLAN (%)	FTP Server	FTP Directo
7825447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	1
825447C8913	Digta_WLAN	Support	V2.2	Yes	10.34.1.66	255.255.255.0	10.34.1.254	0	0	10.34.1.18	1
Digta(W)LAN Co	onfiguration			Are	e you sure yo	ou want to use To	emplate Settir	ngs?			
Digta(W)LAN Co ✓ use DHC	onfiguration P	,	Web	Are	e you sure yo	ou want to use Te	emplate Settir	igs?	-		-
Digta(W)LAN Co use DHC IP Address	phiguration P 10.34.1.65		Web A	! Are	e you sure yo	ou want to use To Ja	emplate Settir	in			<u> </u>
Digta(₩)LAN Co ✓ use DHC IP Address Netmask	pnfiguration P 10.34.1.65 255.255.255.0		Web A	. Are	e you sure yo	ou want to use Ti	emplate Settir	ngs?	<u> </u>		<u>,</u>







Firmware Update

The *"Firmware update"* button is used to execute firmware updates for all Digta W/LAN-Adapters marked in the list.

NOTICE

Risk of damage!

Under no circumstances should the power supply be interrupted during the update process!

themet MAC	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout (sec)	WLAN (%)	FTP Server	FTP Director
825447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	1
			DigtaLanCo	onfig				×			
Digta(W)LAN Ci	onfiguration P	[1	Please de back up	o not unplug in the device	g the device unt e list. This could	il it reboots ar take up to 4 r	nd comes ninutes.			
Digta(W)LAN C. ☑ use DHC IP Address	phiguration P 10.34.1.66		1	Please de back up	o not unplug in the device	g the device unti e list. This could	il it reboots an take up to 4 r	nd comes ninutes. OK			
Digta(W)LAN C ☑ use DHC IP Address Netmask	ponfiguration pp 10.34.1.66 255.255.255.0		1	Please di back up	o not unplug in the device Fir	g the device unti e list. This could mware Update	il it reboots an take up to 4 r	nd comes ninutes. OK			

When it is finished, select the firmware file.

Business Systems

GRUNDIG

💐 Offnen			×
Suchen in:	iii Firmware	• 🔁	- III * 1
Name	v		
9 edmgb	sV1.4i.bin		
			•
∢ Dateiname:	m edmgbsV1.4i.bin		Öffnen
∢ Dateiname: Dateityp:	‴ edmgbsV1.4i.bin Bin Files (".bin)		0/fnen Abbrechen

A message appears requesting confirmation that the firmware should be updated on all marked Digta W/LAN-Adapters. The firmware is then transferred to the adapter.

Luieme(MAL	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout (sec)	WLAN (%)	FTP Server	FTP Directo
7825447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	1
7825447C8913	Digta_WLAN	Support	V2.2	Yes	10.34.1.66	255.255.255.0	10.34.1.254	0	0	10.34.1.18	1
Diata(W/II AN C	antian matian	DigtaLa	nConfig				>	(<u> </u>			
	°P	?	Would	you like	to use the si	ame FW file for a	all devices?				
Use DHC	P 10.34.1.65	?	Would	you like	to use the si	ame FW file for a	Nein				
IP Address Netmask	255.255.255.0	?	Would	you like	to use the si	Ja Ja	all devices? Nein				

The final update is executed after another confirmation prompt.

Business Systems

GRUNDIG

Digta»

R.	Grundig Dig	aLAN / Digta(V	V)LAN Ada	pter Confi	guration						_	
File												
E	thernet MAC	Name	Location	FW	DHCP	IP	Netmask	Gateway	Timeout (sec)	WLAN (%)	FTP Server	FTP Directory
7	825447C8A27	Digta_W/LAN	Office RG	V2.3RC3	Yes	10.34.1.65	255.255.255.0	10.34.1.254	0	0	192.168.1.2	1
7	825447C8913	Digta_WLAN	Support	V2.2	Yes	10.34.1.66	255.255.255.0	10.34.1.254	0	0	10.34.1.18	1
		DigtaLanConfig						×				
(Digta(W)LAN Configuration			WebCor	? Are you sure you want to flash the device?							
	IP Address	10.34.1.66		Adv			Ja	Nein				
	Netmask	255.255.255.0				Firr	nware Update					
	Gateway	10.34.1.254		Apply		FW	Update Reset					
	Telnet Off	Telnet ON	Reboot								[Exit

Then the adapter is restarted. This process can take about three minutes.

The configuration of the Digta W/LAN-Adapter remains unchanged. The current firmware status can be seen in the "DigtaLANConfig.exe" list of configuration tools.

Clicking the "*FW Update Reset*" button executes a firmware update and resets the Digta W/LAN-Adapter to the factory settings.



Troubleshooting

The "DigtaLANConfiguration" does not show a station.

- Are all connections to the Digta W/LAN-Adapter correctly in place?
- Is the power supply on?

Dictations are not transferred to the configured FTP server.

- Ensure that the FTP server is started up.
- Check the FTP server settings for user name, password and authorisations of the user account.
- Is there a firewall preventing access (Standard Port 21)?
- Has "FTP Transfer to FTP server" been selected in the configuration of the Digta W/LAN-Adapter?

Dictations are not transferred.

- Have the dictations on the Digta been marked as "Postponed"?
- Is the network connection interrupted?
- Ensure that the Digta is in USB file transfer mode.

Dictations from the Digta's main folder have been transferred, but dictations from the subfolders have not.

• Check the FTP server to see whether authorisation for the creation of subfolders has been set.

There are dictations with the same file names and an additional #0 (#1, #2, etc.) on the FTP server.

• Dictations remaining on the device are resent during the subsequent transfer process In order to prevent overwriting, existing files are saved with the addition of a # and a consecutive number. Check the configuration of the Digta W/LAN-Adapter for the status of the "Remove transferred dictation files" option.



Technical data

Compatible devices	Digta 422, Digta 7, Digta Station 446, Digta Station 447					
Supported Transmission protocols	SMTP - transfer via e-mail FTP - transfer to an FTP server (active/passive mode)					
Configuration	Static or dynamic IP address assignment by DHCP Configuration via web browser Administration of multiple Digta W/LAN-Adapters via separate configuration tool					
Wireless LAN, WIFI	802.11b/g/n					
Connections	LAN RJ45 Ethernet socket Power supply 5V USB host port WIFI antenna					
Display (green LEDs)	LED "ETHERNET": LED "INTERNET": LED "WLAN":	jittering = data transfer without function blinking = boot up on = wireless LAN connection off = LAN connection				
Dimensions	L x W x H without antenna and plugs: approx. 2.95 x 2.44 x 0.91 inch, 75 x 62 x 23 mm Weight: approx. 2.77 oz., 78.5 g					
System requirements	10/100 Mbit/s LAN with RJ45 connections FTP server (DHCP server recommended) or SMTP server (for e-mail transfer)					

Grundig Business Systems GmbH Weiherstraße 10 D-95448 Bayreuth

> info@grundig-gbs.com support@grundig-gbs.com www.grundig-gbs.com

03/2021