

# Docking stations



Version	Digta Station 447 Set	Digta Station 447 Plus Set
<b>Recharging batteries</b>		
In the Digta 7	•	•
Charging of a spare pack of rechargeable batteries in the station		•
<b>Connections</b>		
Foot switches / Headphone connection		•
Kensington lock connection	•	•
Power supply connection	•	•
USB slot	•	•
<b>Scope of delivery</b>		
Digta Station 447	•	
Digta Station 447 Plus		•
Rechargeable battery pack 962	•	•
Power supply 447	•	•
USB cable	•	•

[to product](#)

[to product](#)