

Accessories	Digta 7 Series	Digta Station 447 Plus	Digta Soundbox 830	PC
<b>Headphones</b>				
Digta Headphone 565 Jack	•			•
Digta Headphone 565 GBS	o	•	•	
Digta Headphone 565 USB				•
Digta Swingphone 568 Jack	•			•
Digta Swingphone 568 GBS	o	•	•	
Digta Swingphone 568 USB				•
Digta Swingphone 950 Jack	•			•
Digta Earphone 957 Jack	•			•
Digta Earphone 957 GBS	o	•	•	
Digta Earphone 957 USB				•
<b>Foot switches</b>				
Foot switch 536 GBS	o	•	o	
Foot switch 540 USB				•
<b>Docking Station</b>				
Digta Station	•			•
Digta W/LAN-Adapter	•	•		•
<b>USB cable</b>				
USB mini cable	•			•
<b>Barcode</b>				
Digta Scan 407	•			
<b>Rechargeable battery</b>				
Rechargeable battery pack 962	•	•		
<b>Miscellaneous</b>				
Digta Card 7	•			•

- compatible
- o connection to docking station

Accessories			
			
Digta Headphone 565	Digta Earphone 957	Digta Swingphone 568	Digta Swingphone 950
			
Foot switch 536 / 540	Digta Station	Digta W/LAN-Adapter	USB mini cable
			
Digta Scan 407	Rechargeable battery pack 962	Digta Card 7	